

Essentia Intelligent Input/Output Unit EME212-I

Instruction Sheet
R10122GB3



Schneider Electric

www.se.com/buildings

R10122GB3
October 2023

© 2020-2023 – Schneider Electric. All Rights Reserved. This information is only to be used as guidance. Subject to changes and errors.

Contents

Safety Information	4
Related Information	4
1 Essentia Intelligent Input/Output Unit EME212-I	4
1.1 Status indications	4
1.2 Dimensions	5
1.3 Essentia intelligent input/output unit standard resistive monitoring mode connectivity diagram ..	5

Safety Information

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

Related Information

For technical specifications, please refer to the Product Datasheet for FFS06720312 on se.com.


1 Essentia Intelligent Input/Output Unit EME212-I

The Essentia intelligent input/output unit EME212-I (FFS06720312 and FFS06720312SA) with isolator provides supervision of normally open contacts connected to a single pair of cables. Output has a changeover relay. There is a DIL switch for address setting. Address range is 1-126.

1.1 Status indications

Legend	LED Status	Description
RLY	Continuous Red	Relay Active
RLY	Continuous Yellow	Relay Fault
Poll/ISO	Flashing Green	Polling LED
Poll/ISO	Continuous Yellow	Isolator LED
I/P	Continuous Yellow	Input Fault
I/P	Continuous Red	Input Active

1.2 Dimensions

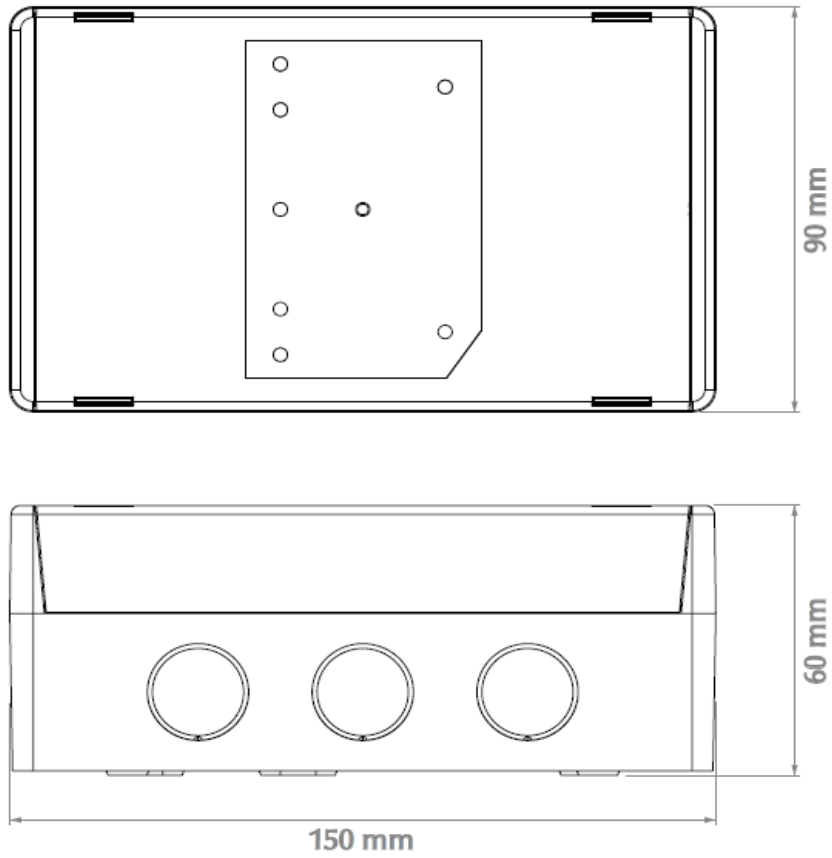

1.3 Essentia intelligent input/output unit standard resistive monitoring mode connectivity diagram

